


Clutch position sender - G476- -2-


Integrated functions: clutch pedal switch for engine start - F194- and clutch pedal switch - F36-

1 - Brake light switch - F- and brake pedal switch - F47-

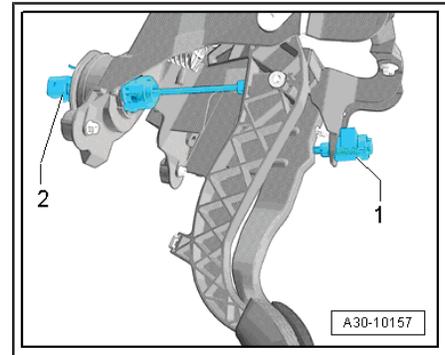


Fitting location on cylinder bank 1 (right-side)

- 1 - Hall sender 3 - G300-
- 2 - Exhaust camshaft control valve 1 - N318-
- 3 - Camshaft control valve 1 - N205-
- 4 - Actuator 6 for camshaft adjustment - F371- (camshaft adjuster B, cylinder 3)
- 5 - Actuator 5 for camshaft adjustment - F370- (camshaft adjuster A, cylinder 3)
- 6 - Actuator 4 for camshaft adjustment - F369- (camshaft adjuster B, cylinder 2)
- 7 - Actuator 3 for camshaft adjustment - F368- (camshaft adjuster A, cylinder 2)
- 8 - Actuator 2 for camshaft adjustment - F367- (camshaft adjuster B, cylinder 1)
- 9 - Actuator 1 for camshaft adjustment - F366- (camshaft adjuster A, cylinder 1)
- 10 - Hall sender - G40-

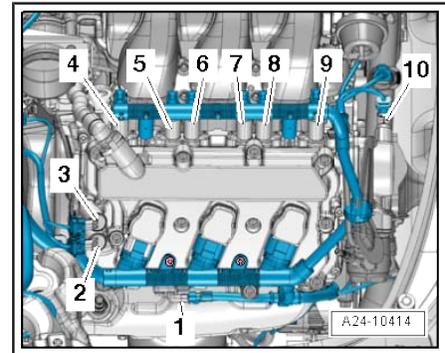

Fitting locations on cylinder bank 2 (left-side)

- 1 - Hall sender 2 - G163-
- 2 - Actuator 7 for camshaft adjustment - F372- (camshaft adjuster A, cylinder 4)
- 3 - Actuator 8 for camshaft adjustment - F373- (camshaft adjuster B, cylinder 4)
- 4 - Actuator 9 for camshaft adjustment - F374- (camshaft adjuster A, cylinder 5)
- 5 - Actuator 10 for camshaft adjustment - F375- (camshaft adjuster B, cylinder 5)
- 6 - Actuator 11 for camshaft adjustment - F376- (camshaft adjuster A, cylinder 6)
- 7 - Actuator 12 for camshaft adjustment - F377- (camshaft adjuster B, cylinder 6)
- 8 - Camshaft control valve 2 - N208-
- 9 - Exhaust camshaft control valve 2 - N319-
- 10 - Hall sender 4 - G301-

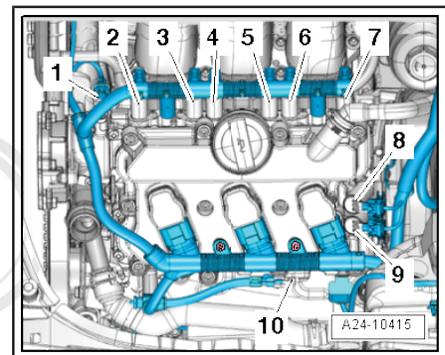

This document is intended for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability for the use of the information in this document. Copyright by AUDI AG.